

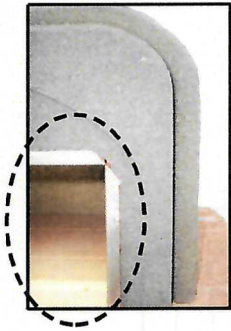


# CAPRI 3



Ean 13 /  
cod. 80 310 9210 - E1 2209 b

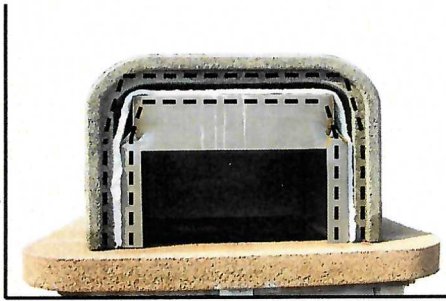

Klappe nicht einbauen

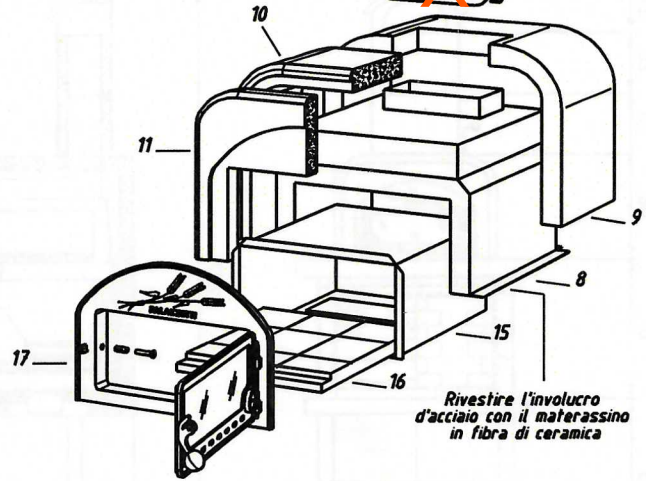

Rivestire l'involucro  
d'acciaio con il materassino  
in fibra di ceramica

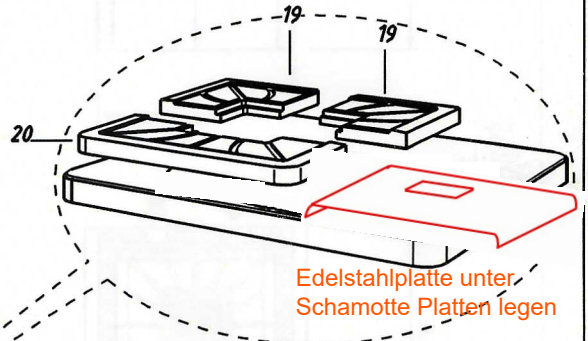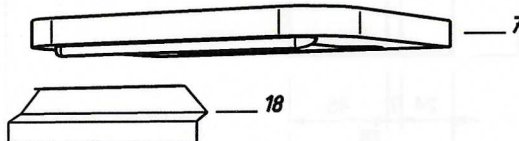

Edelstahlplatte unter  
Schamotte Platten legen

